



**1**

**Fitting the brackets**

The brackets offer two methods of installation, top-fixing or face-fixing:

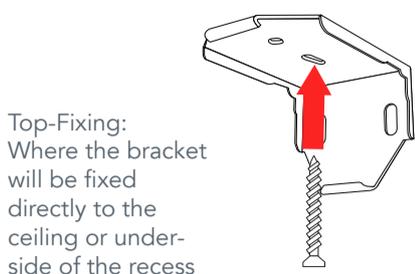


**Top-Fixing:**  
Where the bracket will be fixed directly to the ceiling or underside of the recess

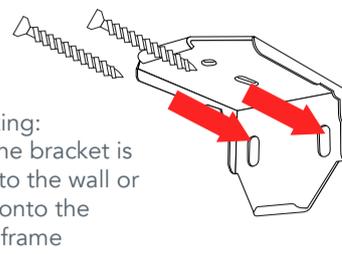


**Face-Fixing:**  
Where the bracket is fixed onto the wall or straight onto the window frame

**2**


**Installing the Blind**

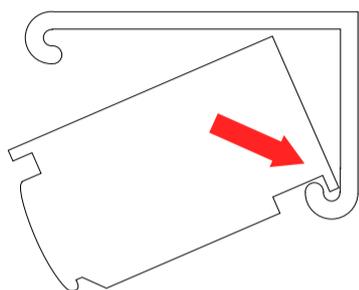

Holding the head-rail at an angle, locate the rear protruding lip of the head-rail into the lower catch on the bracket.

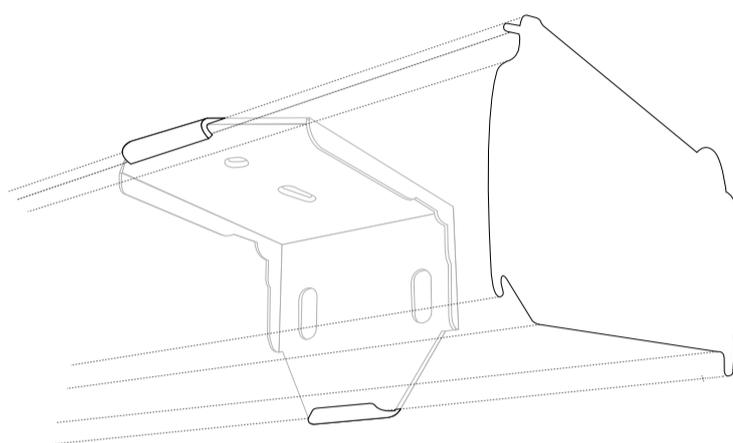

When the head-rail is securely inserted into the bracket, you will be able to see the front and lower catches around the lip on the head-rail.

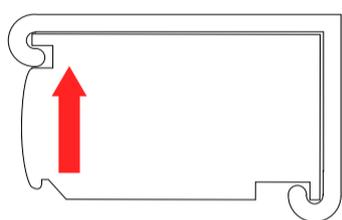


Straighten the head-rail so that it is level and press firmly upwards so that the upper lip of the head-rail clicks into place on the front catch of the bracket.

**3**

**Child Safety**

**Cord Condenser**

A breakaway cord condenser is pre-fitted to the lift cords so that when a horizontal force is applied to the cords entering the condenser, it safely breaks away eliminating any hazardous loops.

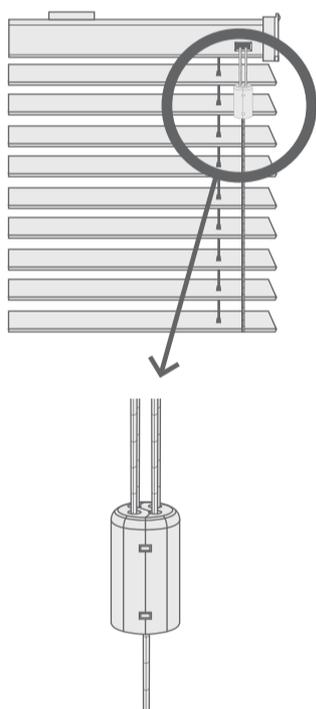


If the cord condenser is pulled apart:

Untangle and untwist cords.

For 2 cords: Press the cord condenser together until it is fully closed.

For 3 cords: Place the loose cord in the opening in one half of the cord condenser and press the cord condenser together until it is fully closed.

For 4 cords: Place one of the loose cords in the opening in one half of the cord condenser, the remaining loose cord in the opening in the other half and press the cord condenser together until it is fully closed.

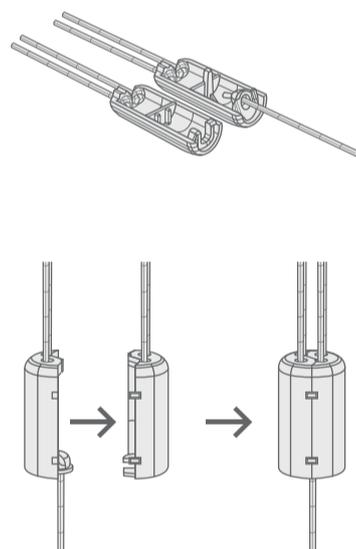


**4**

**Cord Safety Cleat**


The safety cleat shall be installed as close to the headrail as possible and in all cases not less than 1500mm from the floor. The cord must be fully accumulated around the safety cleat(s) when the blind is not in use. Use the table below to determine the distance required between the cleats to fully accumulate the cords when the blind is fully raised.

Drop of Blind	*Distance between cord cleats (centre to centre)
1-1000mm	100mm
1001-2000mm	150mm
2001-3000mm	300mm

Place the safety cleat in the desired position on the wall and mark the positions of the holes with a pencil.

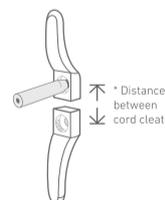

Mark the hole positions and drill as required. Use the screws provided to attach the safety cleat to the wall.



Wrap the cords around the cord cleats in a figure of 8. When the cords are fully accumulated ensure they are secure so when any cord is pulled no excess cord is released.

